

How to Change a Master Code to your Bosch Security Alarm System

Enter your four-digit Master Code and press [**1** #]

for example, [**3245 1**#].

2 or 3 beeps sound and the STAY and AWAY indicators flash.

This means your master code is valid and you can continue procedure.

One long beep means an invalid code and you cannot complete the code change process without the correct four-digit Master Code

You MUST have this Master Code to continue this procedure.

(e.g.) This is very common that when you have purchased a new property without been given the correct Master Code to operate the alarm system. Please give us a ring for a service call out to help you reset your alarm system.

Now enter the code number (1 to 8) and press [#]

for example, [**1** #] for User Code 1, or [**7** #] for User Code 7

Two beeps sound which means valid entry

Enter the four digits required for the new code and press [#]

for example, for user code **8907**, enter **8907** #]

Two beeps sound and the STAY and AWAY indicators turn off.

The code is now changed and the system is ready to use

Complete procedure for example, **3245 1# 1# 8907#**

To add or change other codes, repeat this procedure for a different user code number (2 to 8) and another four-digit user number

Please note that the the # key press is the same as the **away** key press on many different versions of Bosch keypads

Changing Alarm Codes with alarmmaintenance.com.au