


Arming and Disarming Your CK 236i Alarm System

TO ARM THE SYSTEM:

Your PIN number is four digits long. Don't pause for more than 5 seconds while entering the digits or the alarm system will not except your PIN NO. Enter your PIN Code and press the # key. Example: 1234 #

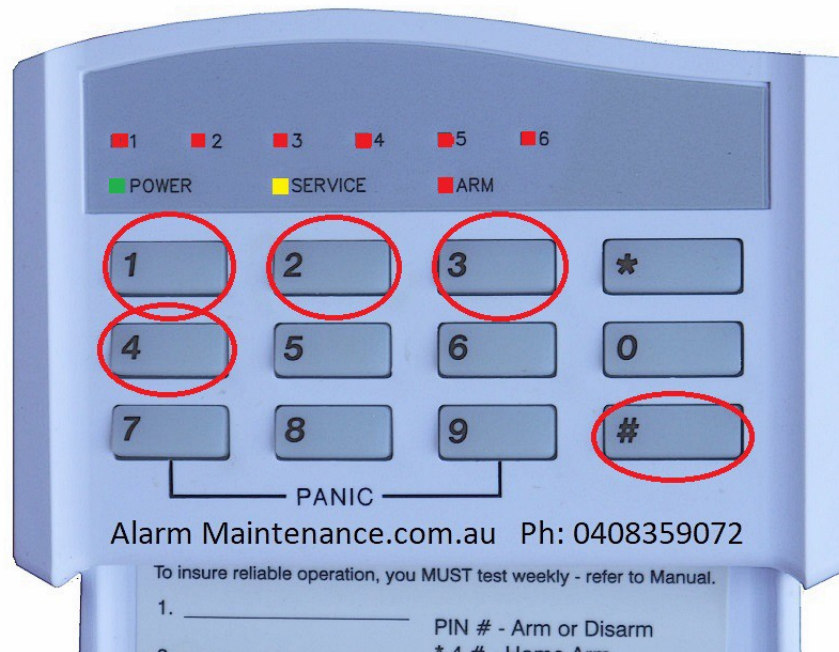

If you make a mistake while entering your PIN number, the keypad will beep five times.

Make sure the red ARM light comes on. The codepad will beep twice to confirm that the system is armed.

Vacate your premises within the required Exit time

The exit delay time can be programmed from 10 seconds to 150 seconds.

Once the exit delay time has expired, the keypad will beep twice to confirm that the system is armed.

The keypad will beep slowly until 10 seconds before the delay time expires, then rapidly for the last 10 seconds. Then it will stop beeping.

Your alarm system is now armed (ON)

TO DISARM THE SYSTEM:

Enter only through a TIME DELAY area.

The keypad will sound constantly until the alarm system is turned off.

Enter your PIN CODE and press the # key. Example. 1234 #

Make sure the red ARM light on the keypad goes off. Alarm is now OFF.

If the ARM light does not go off, wait for the keypad to beep five times,

then enter your PIN again.

The keypad will beep twice to confirm that the system has been disarmed

How to arm & disarm your CK 236i alarm system
with alarmmaintenance.com.au