

## **BYPASSING ZONES**

This function allows you to bypass one or more zones while your system is DISARMED

Enter your PIN CODE if required (programmed in by the Installer).

Then press the \* key, enter the digit "2", enter the zone to be bypassed, then press # (example to isolate zone 6) **\*2 6 #**  
Bypassed, zones will be indicated as the LED number 6 zone light will flash slowly.

The procedures for adding a bypass and removing a bypass are the same

Bypassing zones to CK 236 alarms by [alarm.maintenance.com.au](http://alarm.maintenance.com.au)